

QUATTRO

1. LED on cover are **OFF** and the on/off switch is **NOT LIT**

- Make sure you have 120 volt or 230 volt power going to unit.
- Make sure there is no lose or broken wires
- Make sure the unit breaker is not popped. Reset unit breaker.
- Replace on/off switch with part number MSCSWC4

2. The on/off switch is **LIT** and the unit doesn't come on

- Make sure unit breaker is not popped. Reset unit breaker.
- Open cover and remove the 2 wires connected to pressure switch. Connect them together and put tape over the connection..Turn fan on.
- If all 8 LEDs come on, pressure switch is defective,
replace airswitch: part number MSCSWC7.

3. Lamps LED **OFF** but ballasts LED **ON**

Replace lamps :part number LMPHGXS180 (yellow tip) or LMPHGS180 (pink tip=no odor control)

Note: part number is etched on the surface of the lamp close to ceramic end cap.

Note: part number is etched on the surface of the lamp, close to ceramic end cap.

4. Ballasts LED **OFF** and lamps LED **OFF**

- Defective ballast. Replace ballast(s): part number BST120/240GL20 (if production before 08/11) or BST120/277GL.

Note: Lamp will not lit if ballast is defective. Lamp does not need to be replaced if not faulty.